

Tripod Encoder Clamp

Perfect for raising your Encoder off the ground and assisting with your Encoder receiving a better 4G signal.

Your Encoder does not work well when on the ground or near to tall obstructions like trees, hedges, walls and sightscreens. The Encoder Clamp will help nullify those issues should you struggle with them at your ground.

Instructions.

1. Attach the Encoder to the Encoder Clamp by screwing it on via the threaded port on the underside of the Encoder.
2. Ensure the Encoder Antenna ports are facing vertically (ie. toward the sky). If you need to adjust the direction of the encoder simply loosen the small Butterfly Screw to adjust the orientation of the Encoder and then retighten.
3. Attach the Encoder Clamp to the Tripod and tighten the screw until secure

Please note, you will need to secure the Encoder Clamp so that the Encoder is still able to be plugged into the Large FrogBox Battery without the Charging Cable being under tension.

